

ASSEMBLY INSTRUCTIONS

(For LD8176-11)

Parts List				
Pieces	Schema	Description	QTY	Remark
A	(M8*35)	Screw	2	Hard ware pack
B	(M8)	Flat washer	2	
C	(M8)	Lock washer	2	
D	(M8)	Nut	2	
E	(M8)	Nut cap	2	
F		Wrench	1	
G	1	Seat	1	These parts have been assemble by factory already.
	2	Single alu plate	2	
	3	Alu plate	2	
	4	Spring plate	2	
	5 (M8*35)	Screw	4	
	6 (M8*45)	Screw	4	
	7 (M8)	Flat washer	8	
	8 (M8)	Lock washer	8	
	9 (M8)	Nut	8	
	10 (M8)	Nut cap	8	
	11 (M6*20)	Screw	2	
	12 (M6)	Flat washer	2	
	13 (M6)	Lock washer	2	
	14	TR Parts	1	
H	1	Base	1	
	2	Oil cap	1	
I		Foot leveler	6	
J		Seat Cushion	1	




WARNING!

- This chair has a 275 lbs weight capacity.
- Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

ATTENTION:

1. Please read these instructions carefully before assembly.
2. Check parts against the parts list to make sure you have all parts needed for proper assembly.
3. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

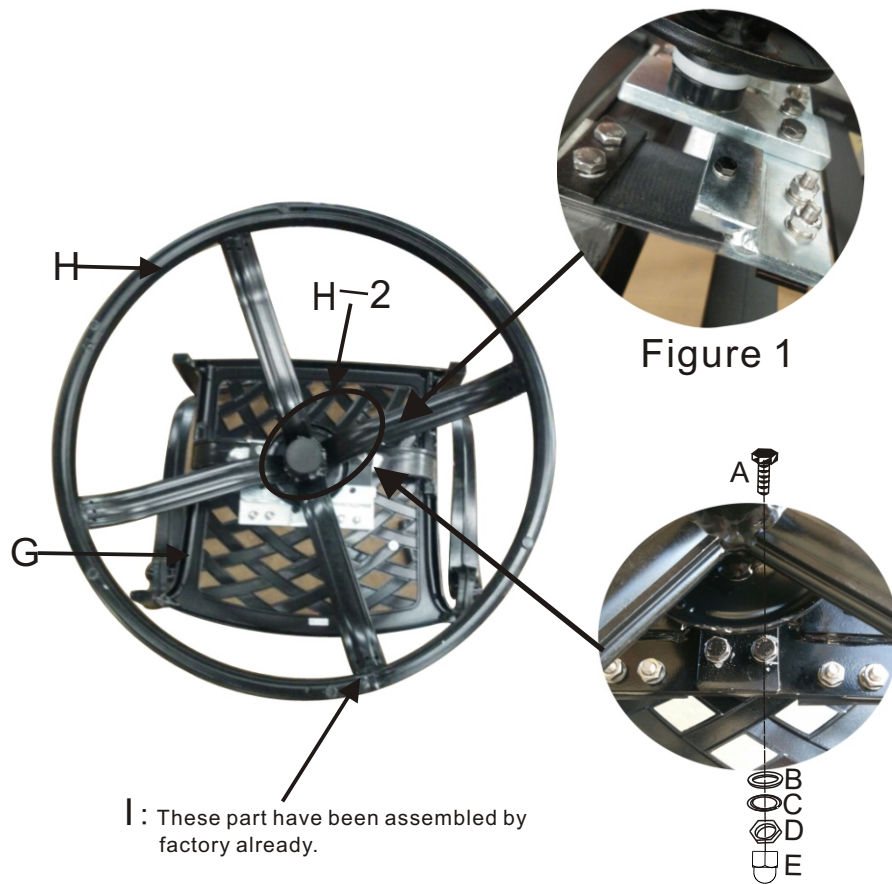

1. Before removing all protective packing material and position base on floor. Attach the base(H) onto the seat (G) using bolt(A), flat washers(B), lock washers(C), nuts(D) and nut cap(E). Be sure to the arrows face to front.
2. Tighten all the bolts and nuts. Test the swivel rocker gently. If the rocker does not rock properly, double check the assembly procedure.
3. Remove all protective packaging.
4. If the back rocking mechanism is too tight, you can loosen it by removing the adjusting block(G14) on the bottom of the TR. Please make sure proper assembly is done after adjusting the tightness. See figure 1
5. Put Cushion(J) on the unit(as shown in the picture)

Warning: DO NOT use acid or alkaline washing liquid to clean the product.

